




Nikon CoolPix S5 Plastic LCD Screen Cover Replacement

This guide demonstrates how to install the plastic LCD screen cover on the Nikon CoolPix S5 camera.

Written By: Josh Miller

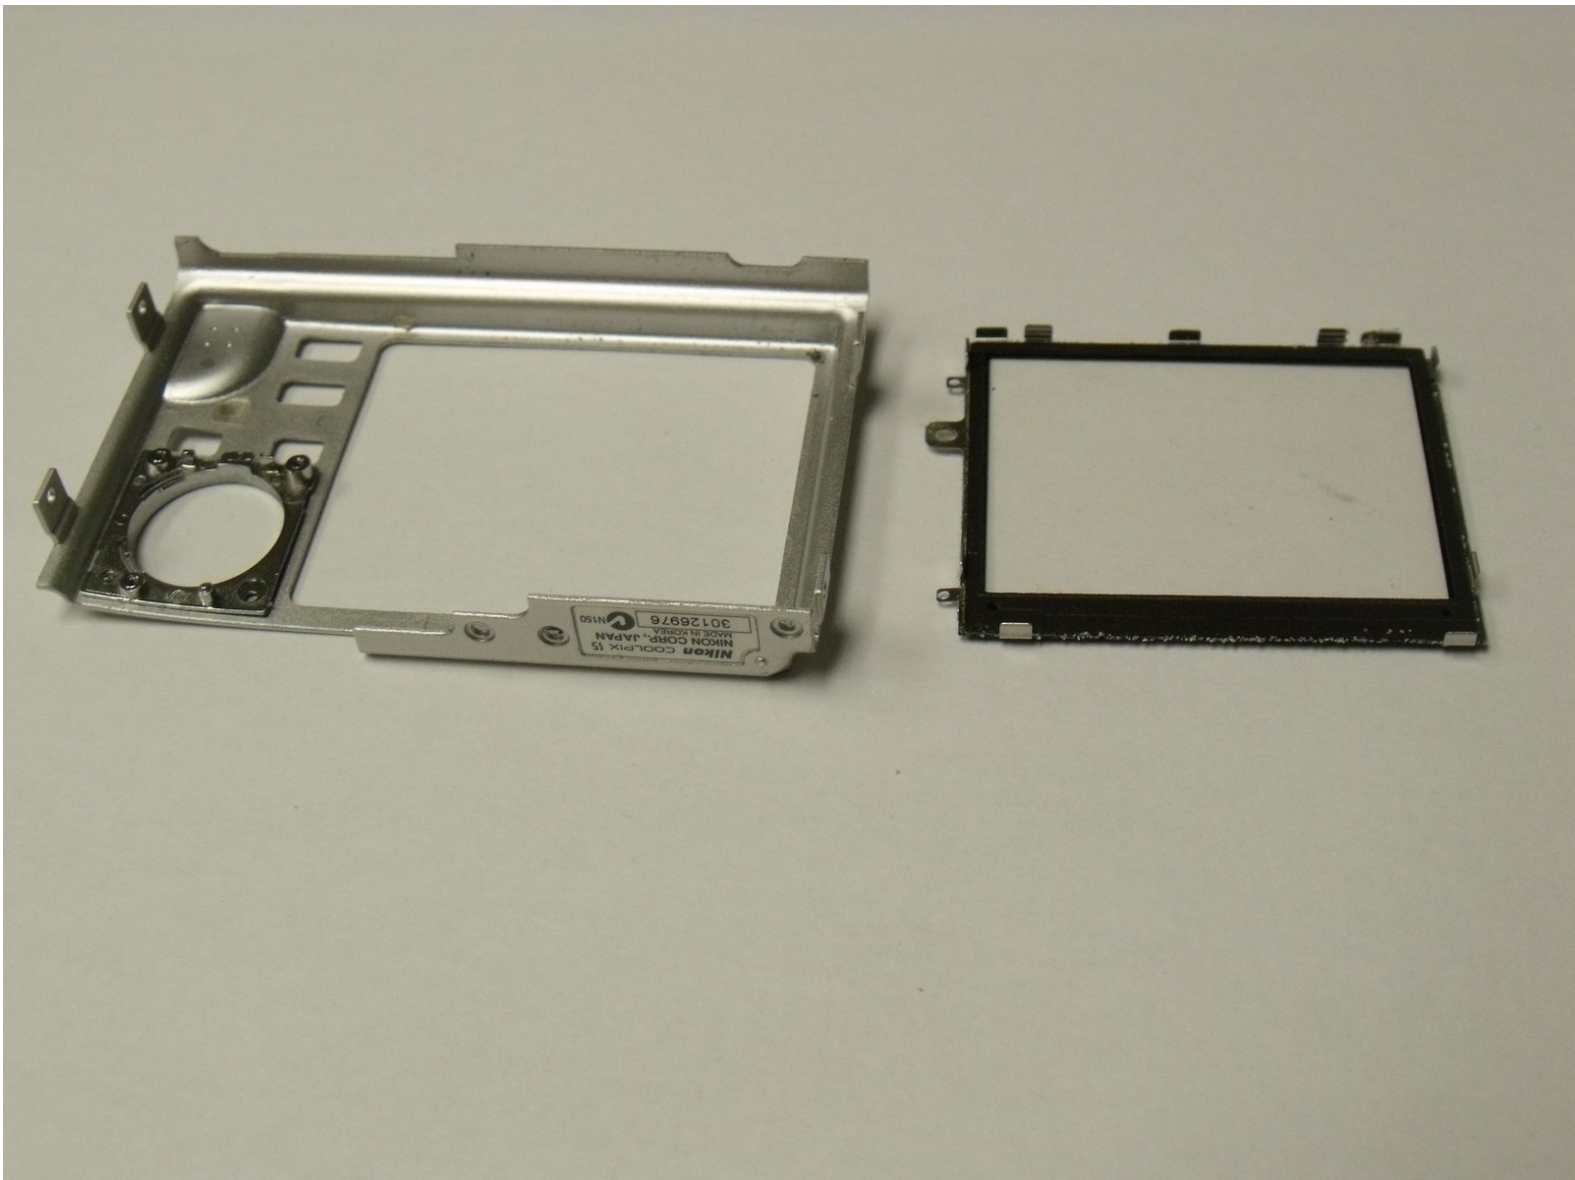

INTRODUCTION


This guide is to be used to install the plastic LCD screen cover in the case that it becomes damaged or no longer functions properly due to overuse. A Phillips screwdriver will be needed to complete this installation.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover

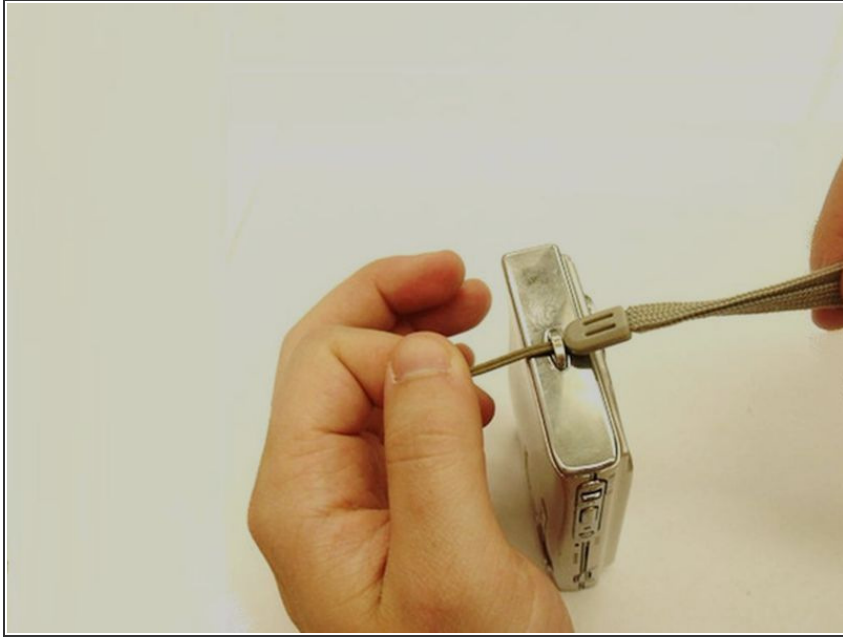


- Remove wrist strap by unknitting the strap.

Step 2

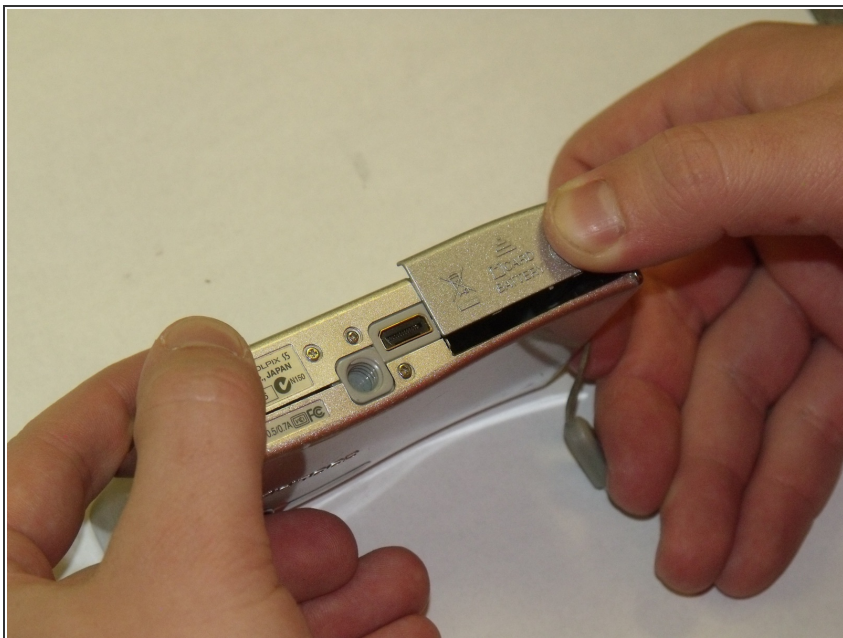


- Open SD/Battery cover.

Step 3

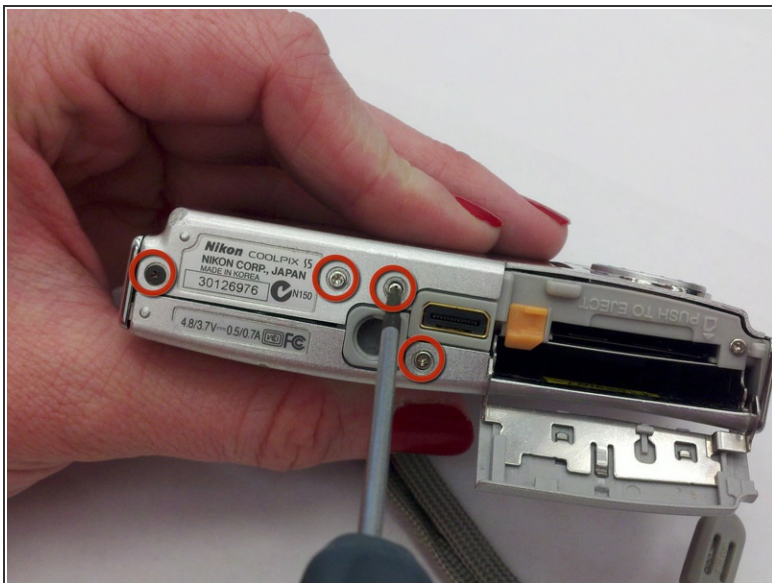

- Remove the four screws on the bottom of the camera using the Phillips-Head screwdriver.

Step 4

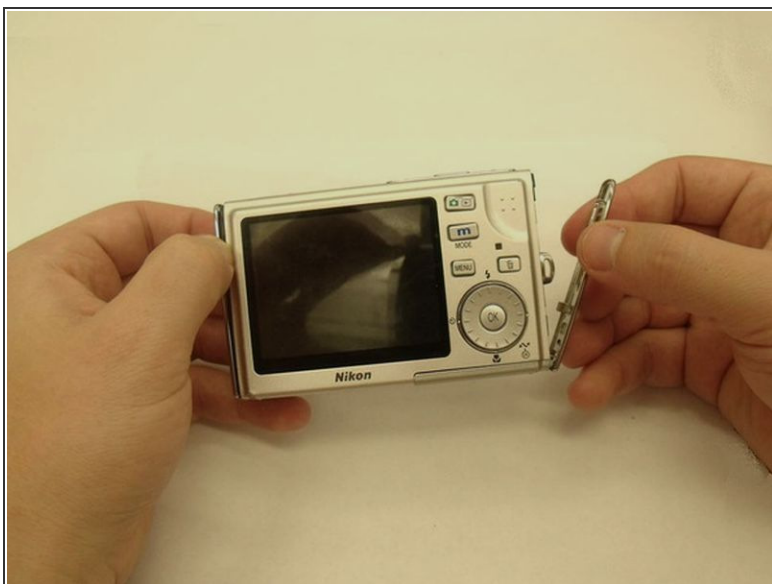



- Pull the silver side panels on each side.

Step 5




- On the right side of the camera (that contains the wrist strap loop), use the screwdriver to remove the two screws holding the backplate in place.
- Repeat this step for the left side.

Step 6

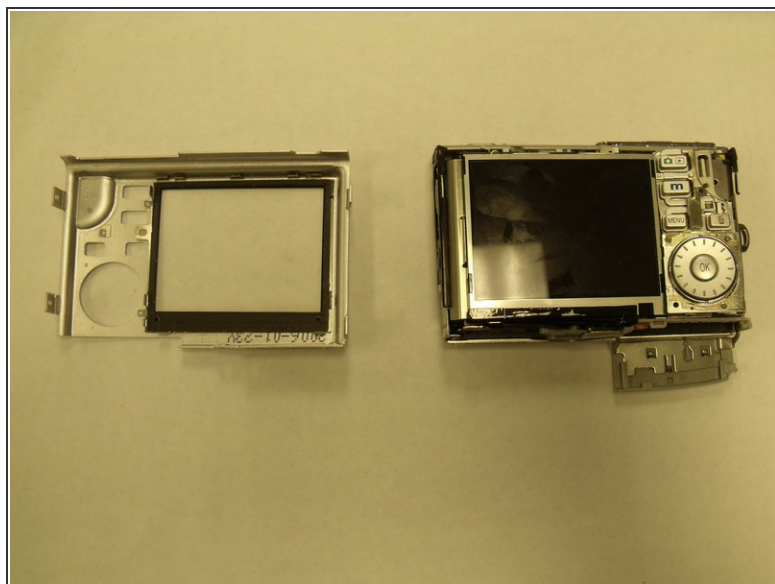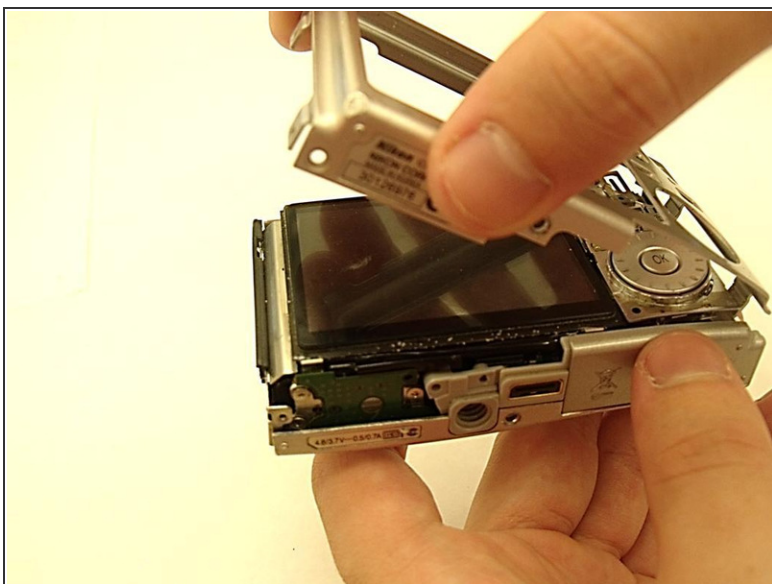

- Pull the back silver faceplate to separate it from the rest of the camera.

Step 7 — Plastic LCD Screen Cover

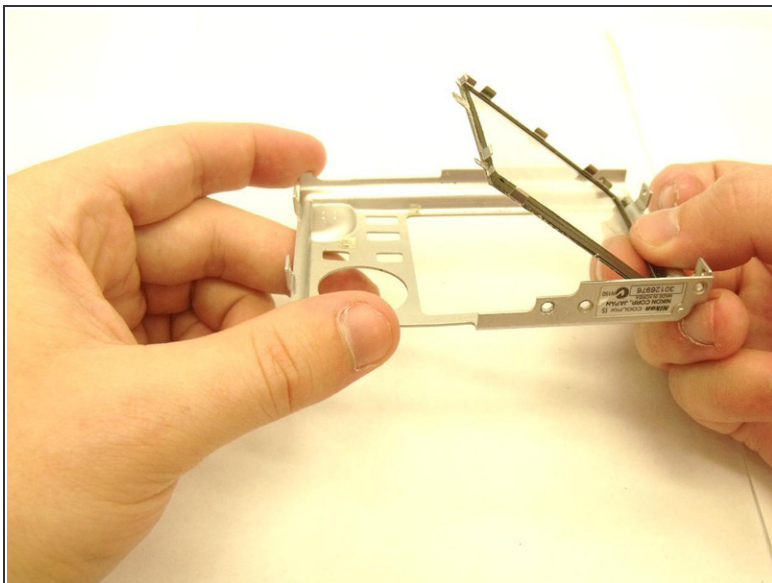

- Press lightly on the outer surface of the plastic LCD screen cover in each corner.
- The plastic LCD screen cover should pop out of the back plate.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-21 09:38:28 AM.